



PCB SIDE:

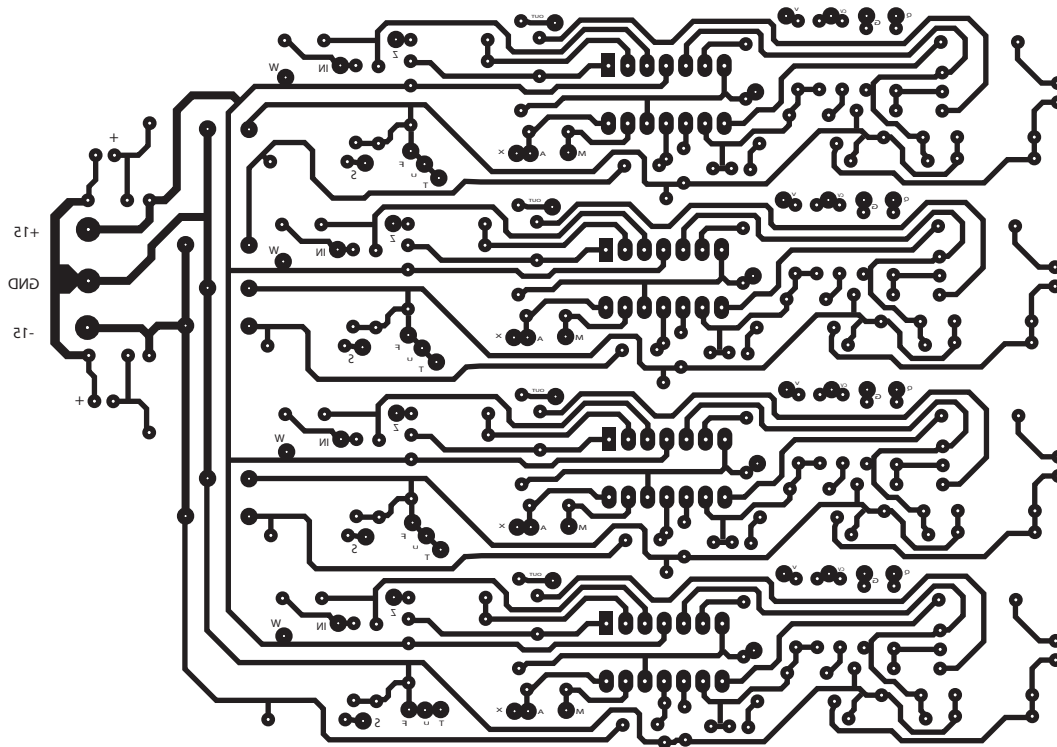


COMPONENT SIDE:

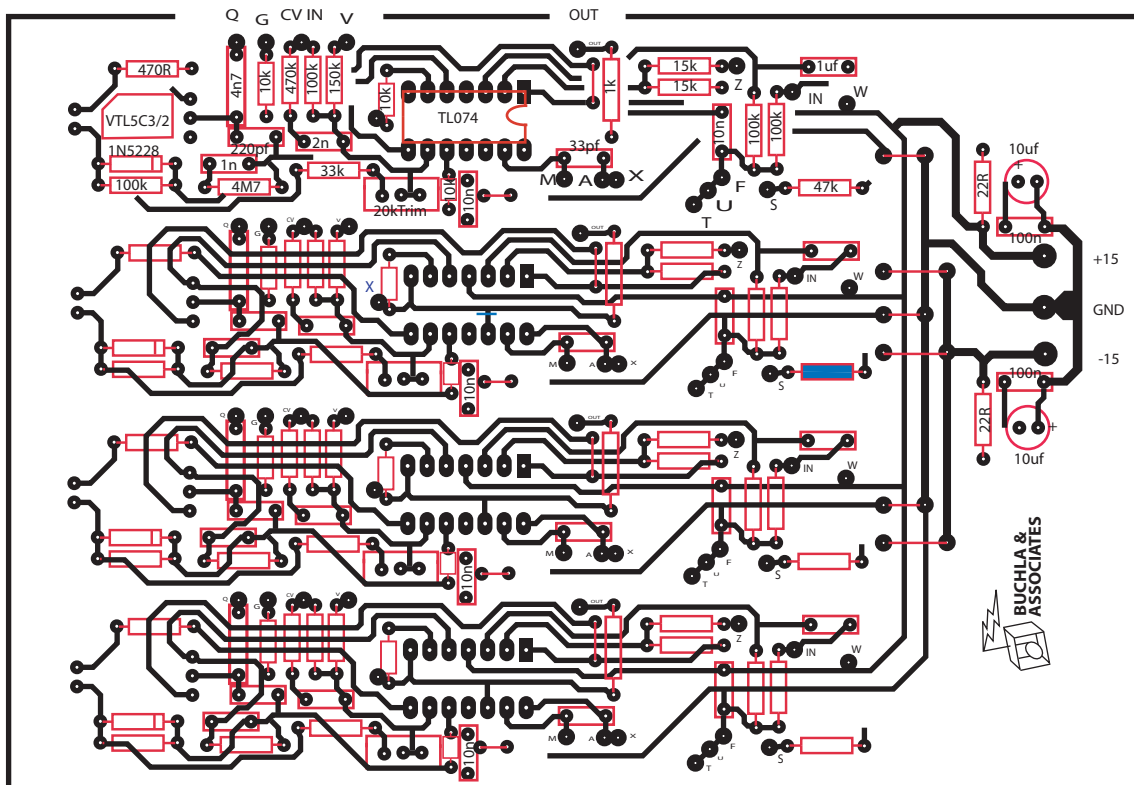

For Conventional use (NO RESONANCE) check the LPG section with blue markings:

Ommitt blue filled resistor,cut track that connect to pin 12 of the TL074 and use the blue X to wire the switch, Ommitt the resonance pot and wirings and ofcourse apply this for all 4 sections.

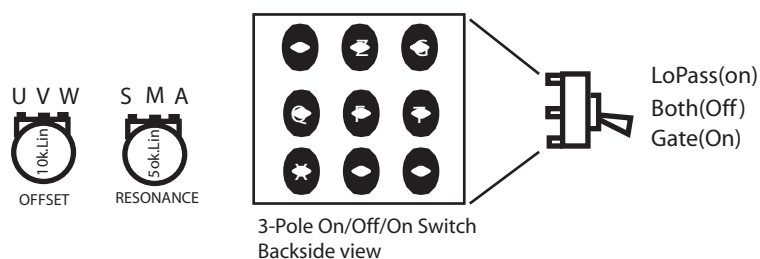

Note: 1N5228 = 3.9v Zenner

You Only Need To Wire The
Contacts Filled Up With A Letter!