


DN22 Service Information.

Line Driver Information.

On the schematic diagram for the DN22 the component labelled as LD1 is known as a line driver. This is the output device from the unit and is unfortunately no longer available. This device can be replaced with an NE5534 operational amplifier and two capacitors. The connection details for this modification are shown below. This need only be carried out on failure of the original line driver device.

The line driver device can be tested outside the unit by connection to the test circuit, also shown below.

Line Diver Substitution.

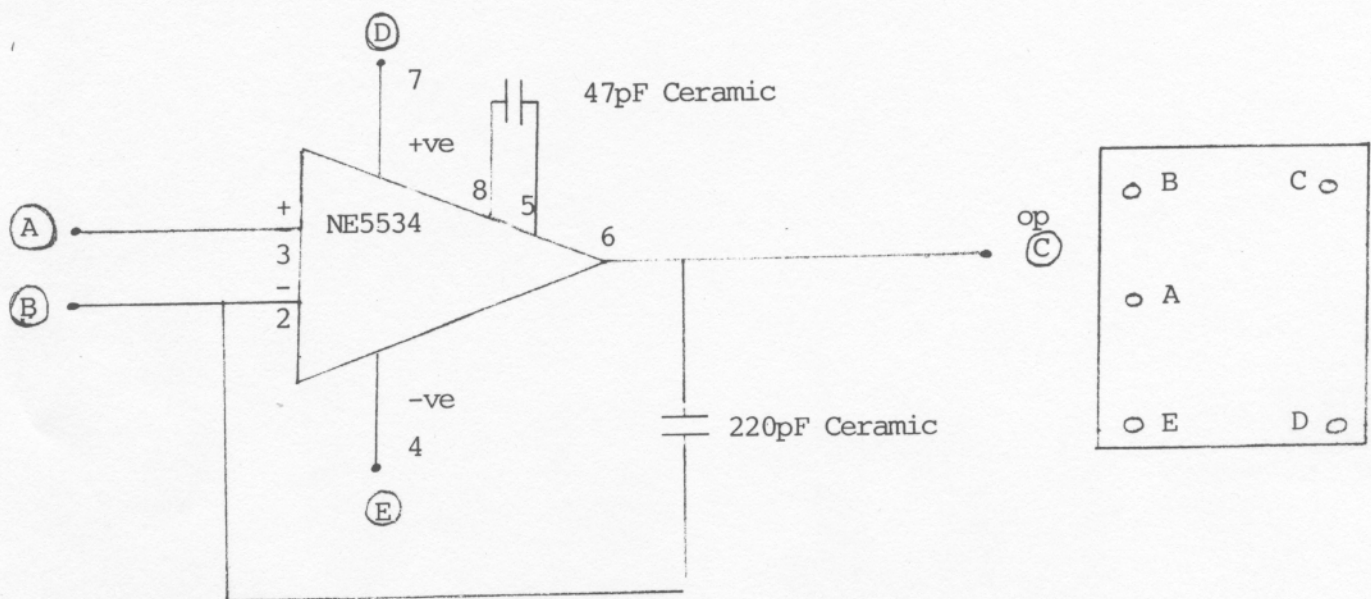

Test Circuit.

